

ADMINISTRATION ACCESS INCORRECT SETUP GUIDE

NF20MESH FAQs



Overview

The default password allows you to access to the administration page of your **NF20MESH**, however many **Internet Service Provider** (ISP) will have implemented their own default username and password.

Remember your username and password

If you have changed the **username** and **password**, you must remember the words or strings of characters that you have defined.



Important – NetComm Technical Support does not have a record of your personal username and/or password, or Internet Service provider's custom username and password for security reasons.

Initial attempt to log in to the Web interface of the NF20MESH

Open a web browser using a laptop or PC (such as Internet Explorer, Google Chrome or Firefox), type following address into the address bar and press enter.

<http://192.168.20.1>

Type “**admin**” in the **Username** and **password** printed on the back of the modem in the **Password field** and click the **Login** button.

NOTE – Some Internet Service Providers use custom password. If login fails, contact your Internet Service Provider.

