

Storage Service


The Storage Service options enable you to manage attached USB Storage devices and create accounts to access the data stored on the attached USB device.

Storage Device Info

The storage device info page displays information about the attached USB Storage device.


Log in to the web interface

- 1 Open a web browser (such as Internet Explorer, Google Chrome or Firefox), type **http://192.168.20.1** into the address bar and press **enter**.

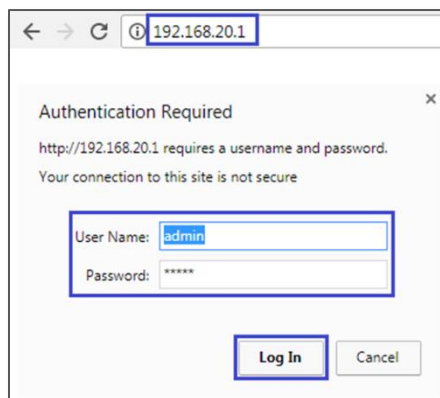

- 2 At the login screen, type **admin** into both the **User Name** and the **Password** fields and click **Log In**.

- Click on the **Advanced Setup** menu at the left of the page and then click the **Storage Service** option.

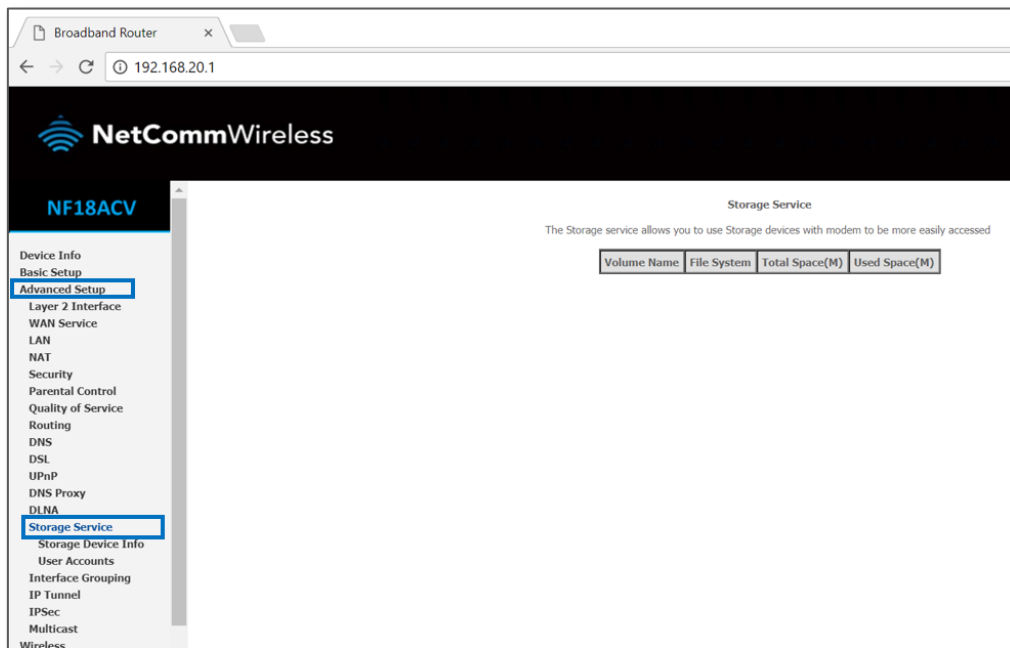


- Click the **User Accounts** option from the **Advanced Setup > Storage Service** submenu.

User accounts are used to restrict access to the attached USB Storage device.


To delete a User account entry, click the **Remove** checkbox next to the selected account entry and click **Remove**.

Click **Add** to create a user account.

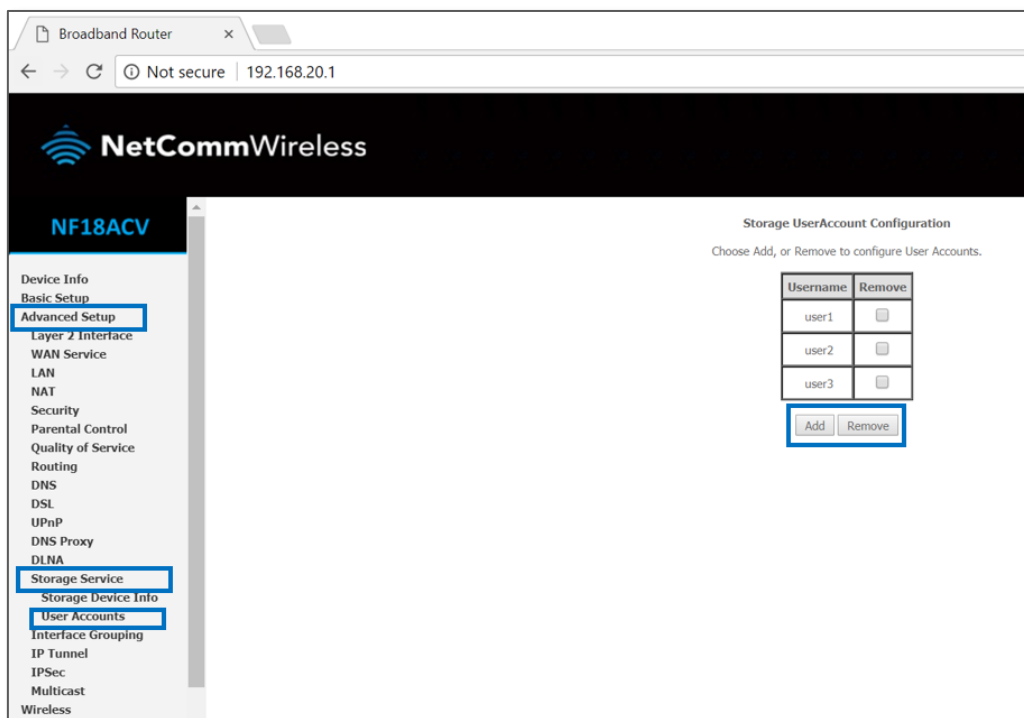

- Adding an account allows the creation of specific user accounts with a password to further control access permissions.

- 6 To add an account, click the **Add** button and then enter the desired **Username** and **Password** for the account.

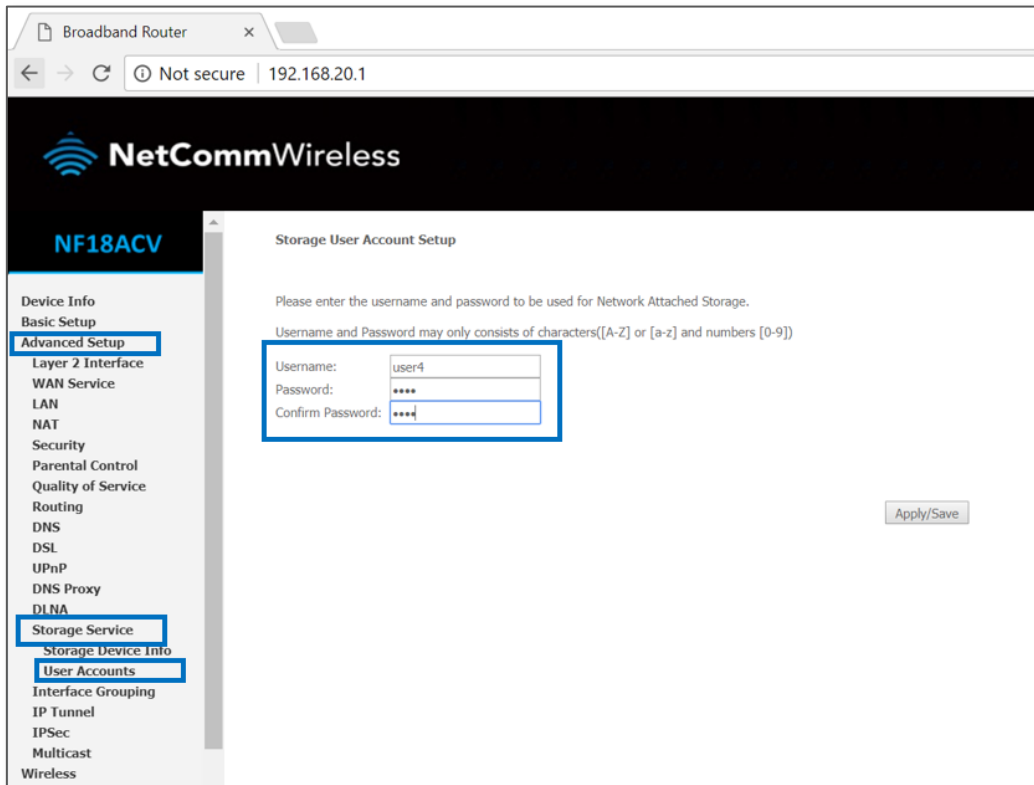

Broadband Router x

Not secure | 192.168.20.1

NetCommWireless

NF18ACV

Device Info
Basic Setup
Advanced Setup
Layer 2 Interface
WAN Service
LAN
NAT
Security
Parental Control
Quality of Service
Routing
DNS
DSL
UPnP
DNS Proxy
DINA
Storage Service
Storage Device Info
User Accounts
Interface Grouping
IP Tunnel
IPSec
Multicast
Wireless

Storage User Account Setup

Please enter the username and password to be used for Network Attached Storage.

Username and Password may only consists of characters([A-Z] or [a-z] and numbers [0-9])


Username: user4

Password: ****

Confirm Password: ****

Apply/Save

- 7 Ensure that the **SAMBA** Service is ☒ **Enabled**:

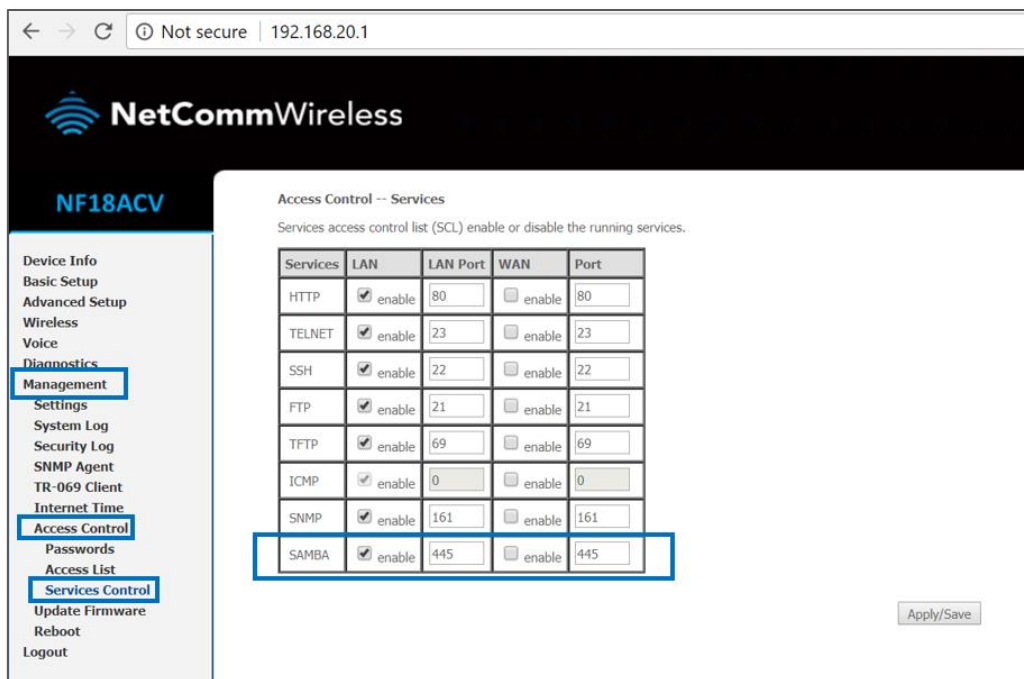

Not secure | 192.168.20.1

NetCommWireless

NF18ACV

Device Info
Basic Setup
Advanced Setup
Wireless
Voice
Diagnostics
Management
Settings
System Log
Security Log
SNMP Agent
TR-069 Client
Internet Time
Access Control
Passwords
Access List
Services Control
Update Firmware
Reboot
Logout

Access Control -- Services

Services access control list (SCL) enable or disable the running services.


Services	LAN	LAN Port	WAN	Port
HTTP	☒ enable	80	☐ enable	80
TELNET	☒ enable	23	☐ enable	23
SSH	☒ enable	22	☐ enable	22
FTP	☒ enable	21	☐ enable	21
TFTP	☒ enable	69	☐ enable	69
ICMP	☒ enable	0	☐ enable	0
SNMP	☒ enable	161	☐ enable	161
SAMBA	☒ enable	445	☐ enable	445

Apply/Save

Note that the NF18ACV only supports SAMBA version 1.

Accessing a USB hard drive connected to the NF18ACV using a Windows PC

- 1 Exit out from the NetComm router's WEB Interface page and open up the "Windows Explorer" and type \\192.168.20.1 on the top address bar.

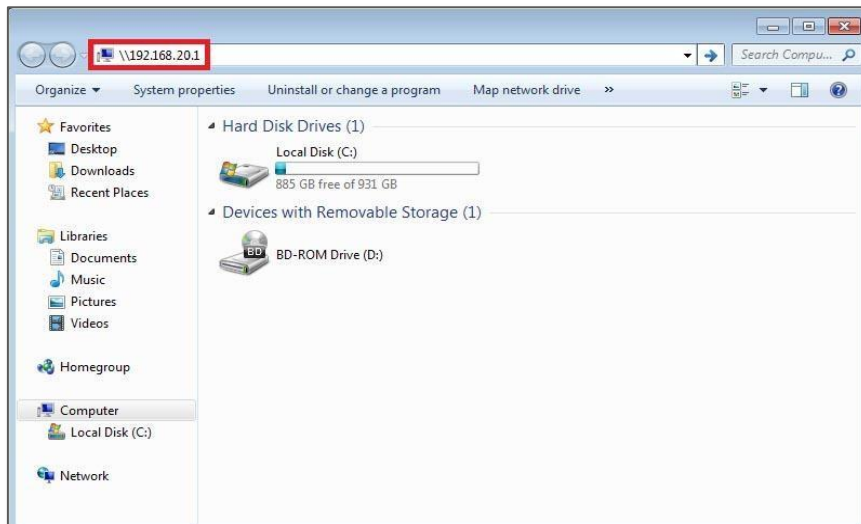

Note – Windows Explorer is different from the Internet Explorer. You can open a Windows Explorer by opening Computer or Documents.




Important – Turn off firewall/ antivirus firewall if it has no connection to USB storage through Wireless.

- 2 When prompted for login details, type the Storage User Account **Username** and **Password**. The example below uses "user1" as the username.



- 3 Once you have **logged in**, you will be able to **view and edit** the contents of the USB storage device.

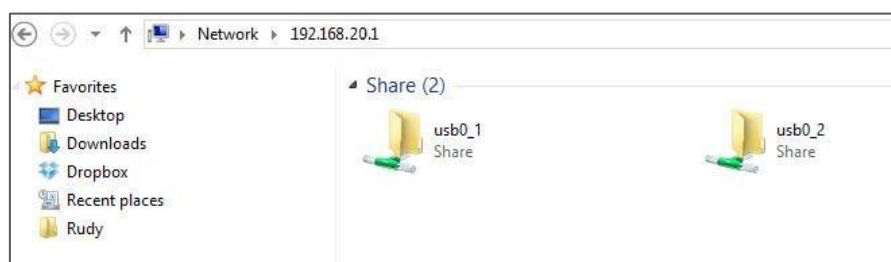


Accessing the USB hard drive connected to the NF18ACV using a Mac PC


- 1 On you Mac click on **Go >Connect to a Server**.



- 2 Enter the path to the network drive you want to map, ie: `smb://192.168.20.1` then click **Connect**.

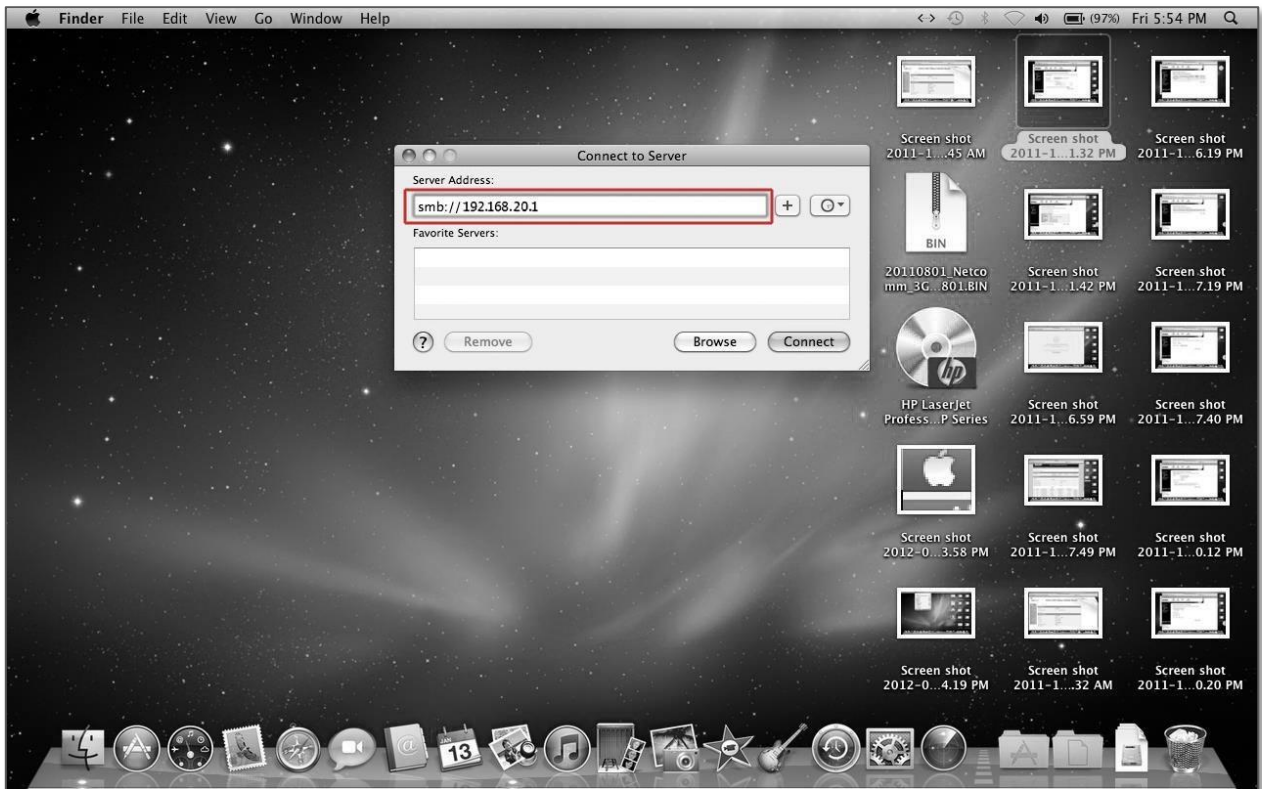

- 3 Enter your Storage User Account user **Name** and **Password** as shown below and click **OK** to mount the network drive.

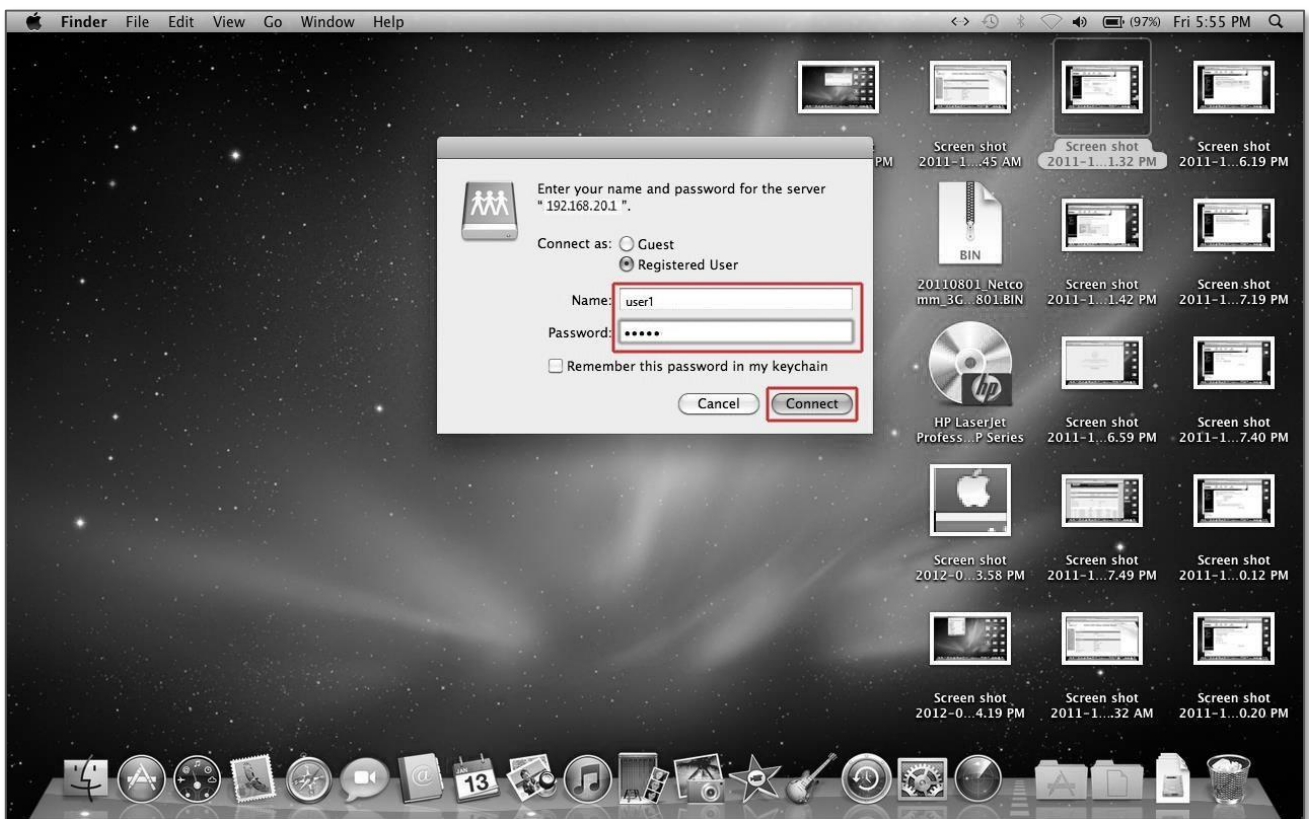

- 4 The drive will now appear on your **finder window sidebar**.

