



Remote Administration Setup

Modem Router - **NF4V**



Remote Administration

Remote administration allows you to access the modem / router / VOIP ATA configuration page from a computer connected to the internet.

This can also be used to enable your ISP (Internet Service Provider) to check your settings if you experience connection issues.



In the case of a VOIP ATA, you would also need to create a "**Port Forwarding**" rule on your modem / router for port 80 (or the applicable remote administration access port) pointing to your VOIP ATA's IP address.

If your modem / router is a NetComm or Dynalink unit, please see the appropriate "**Port Forwarding**" support document for assistance with adding this rule.



Before enabling remote access to your modem, we recommend changing the username and password required to login.

Please see our "**Changing the default username and password**" document for assistance with this.

You can also limit access to a specific IP or subnet (*)

This will prevent unauthorized access to your modem.


* - If supported by your model of modem / router.

LOGGING IN TO THE WEB INTERFACE

1. Open a web browser (such as Internet Explorer, Google Chrome or Firefox), type **http://192.168.20.1** into the address bar and press **enter**.
2. At the login screen, type **admin** into both the Username and the Password fields and click **OK**.



3. Click on the **Management** menu at the left of the page, then click on **Access Control** option and then click on **Services Control** option.

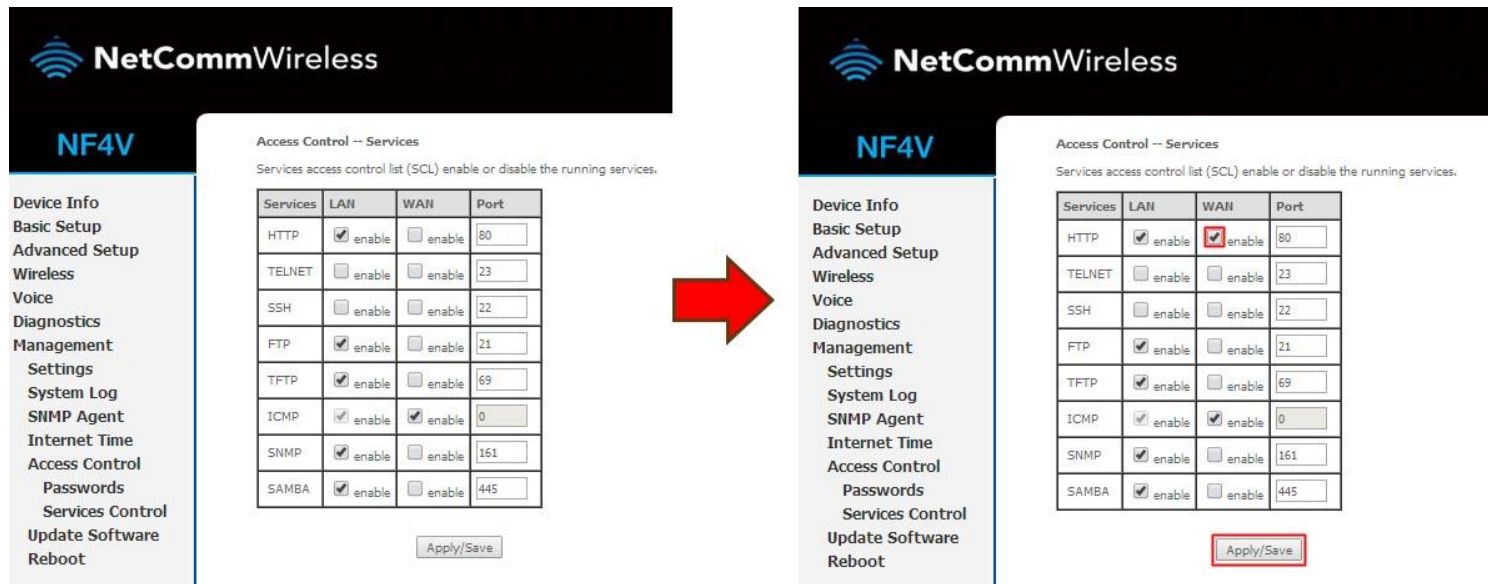

4. **Tick Enable checkbox** of the **WAN** option for the HTTP service.
5. Click the **Apply/Save** button.

You should now be able to access your modem via the address:
<http://<your external IP address>>

You can find your IP address by going to <http://www.whatismyip.com/>.