

Remote Administration Setup Guide

NF18ACV FAQs

Remote Administration Overview

Remote administration allows you to access the NF18ACV web User Interface from a remote computer connected to the internet.


This can also be used to enable your ISP (Internet Service Provider) to check your settings if you experience connection issues.

Before enabling remote access to your NF18ACV, we recommend changing the username and password required to login. Please refer to the *Change Administration Password Guide* document for assistance with this. You can also limit access to a specific IP or subnet. This will prevent unauthorized access to your NF18ACV.


This guide has been revised to include the latest changes and updates from the NF18ACV's new NC2 web user interface.

Enabling Remote Administration

- 1 Open a web browser (such as Internet Explorer, Google Chrome or Firefox), type <http://192.168.20.1> into the address bar and press **Enter**.
- 2 At the login screen, type **admin** into both the **User Name** and the **Password** fields and click the **Login >** button.

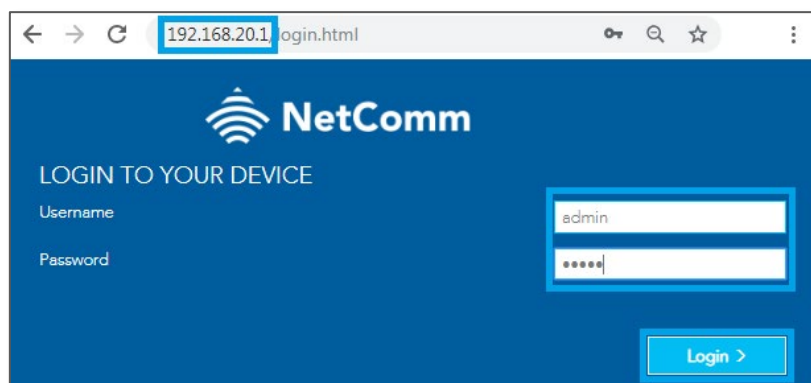

- Click on the **Advanced** on the left, then select **Access Control** located under **Security** option.

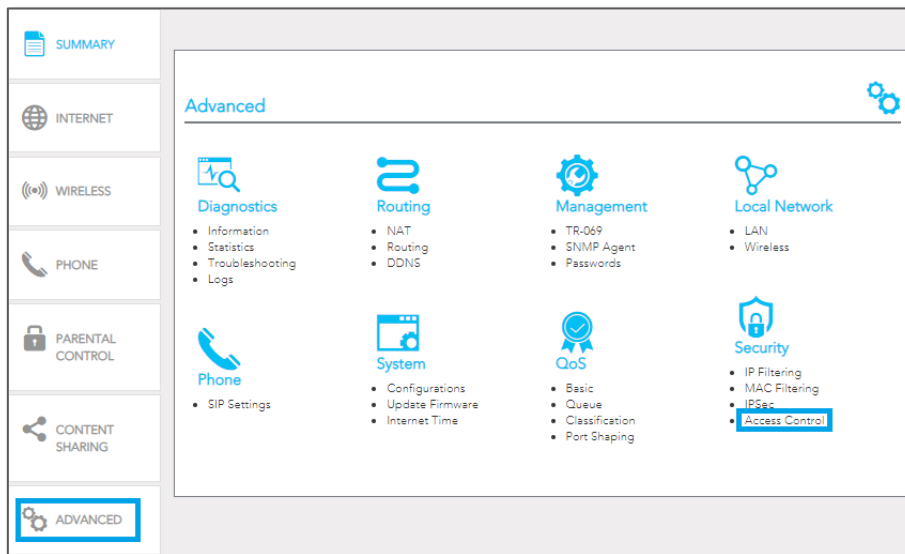

- The **Access Control** page will open.
- Select the **Enable** checkbox of the **WAN** option for the **HTTP Service**.

Services	LAN	LAN Port	WAN	Port
HTTP	<input checked="" type="checkbox"/> Enable	80	<input checked="" type="checkbox"/> Enable	8080
TELNET	<input checked="" type="checkbox"/> Enable	23	<input type="checkbox"/> Enable	23
SSH	<input checked="" type="checkbox"/> Enable	22	<input type="checkbox"/> Enable	22
FTP	<input checked="" type="checkbox"/> Enable	21	<input type="checkbox"/> Enable	21
TFTP	<input checked="" type="checkbox"/> Enable	69	<input type="checkbox"/> Enable	69
ICMP	<input type="checkbox"/> Enable	0	<input type="checkbox"/> Enable	0
SNMP	<input checked="" type="checkbox"/> Enable	161	<input type="checkbox"/> Enable	161
SAMBA	<input checked="" type="checkbox"/> Enable	445	<input type="checkbox"/> Enable	445

Apply/Save



Important – It is highly recommended to change the **Port** to something other than **80**. This is just a safety measure and part of best practices.

- Click the **Apply/Save** button.

You should now be able to access your NF18ACV via the address:

http://<your external IP address>:<port number>

You can find your external (public) IP address by going to www.ipmonkey.com or by clicking on **WAN** option under **Device Info**.