


NF18ACV Port Triggering Setup Guide


If you have a VPN client software such as Cisco VPN client or Nortel connectivity client¹ running on your computer behind the NF18ACV, and if you are not able to connect to VPN through please refer to the instructions below.

Log in to the web interface


- 1 Open a web browser (such as Internet Explorer, Google Chrome or Firefox), type **http://192.168.20.1** into the address bar and press **enter**.

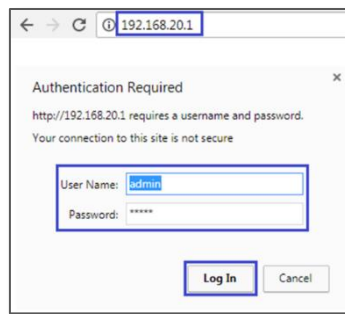

- 2 Click on the **Advance Setup** menu at the left of the page, then click **Port Triggering** option from the **NAT** submenu and then click the **ADD** button.

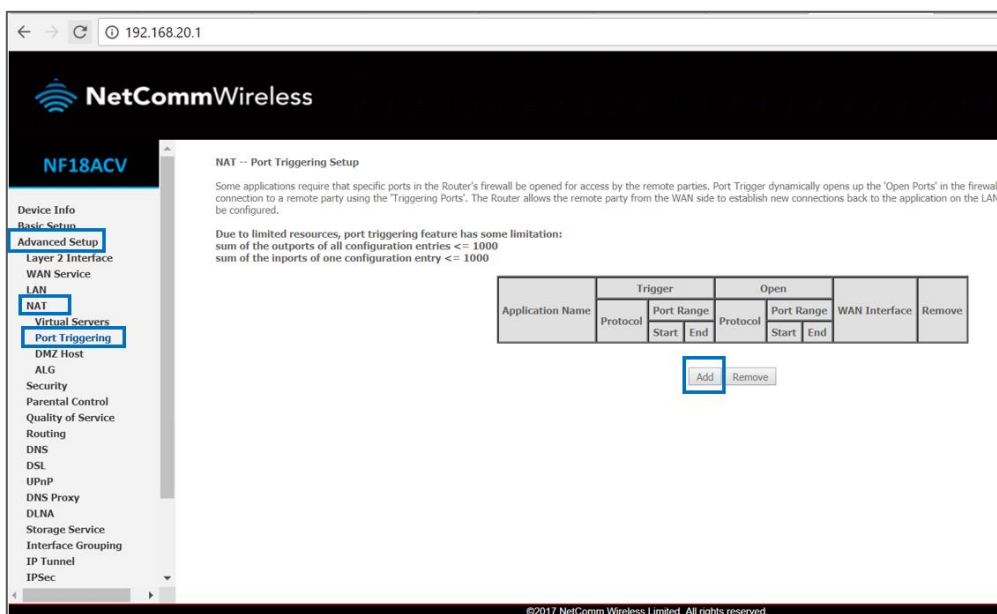

- 3 Please leave **User Interface** as default.
- 4 Select **Custom application** and type an **Application Name**. Example: **VPN**
- 5 Add the following ports: **TCP 1723 / UDP500 / UDP1701** and click on **Apply/Save**.

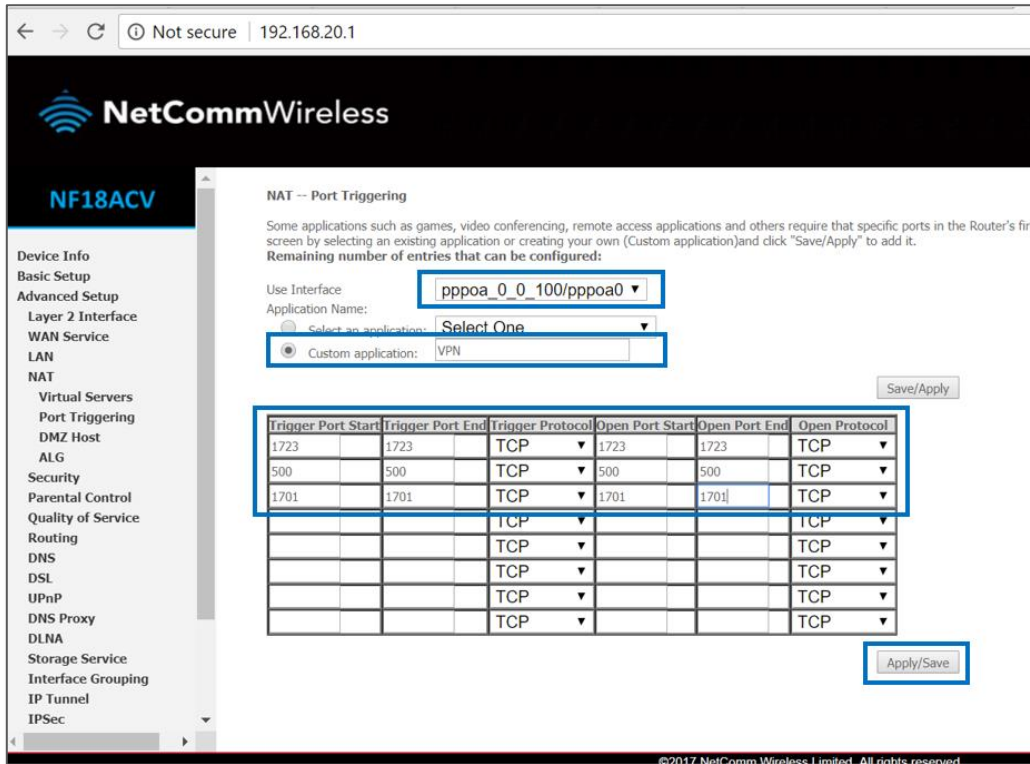

- 6 Once the port triggering rules have been created as shown below you should be able to establish your VPN connection.

