


FAX configuration guide

This section of the guide provides you with instructions to configure FAX parameters in VoIP settings.

- 1 Connect a computer and the modem using an Ethernet cable. (A yellow Ethernet cable is provided with your modem).
- 2 Open a web browser (such as Internet Explorer, Google Chrome or Firefox), type following address into the address bar and press **Enter**.

<http://192.168.20.1>

- 3 Type **admin** in both the **User Name** and **Password** text boxes and click **OK**.

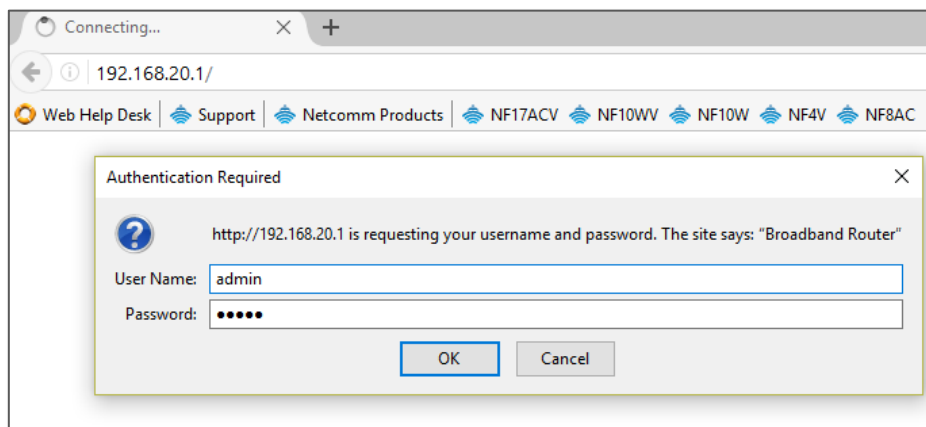

- 4 Configure **VoIP username**, **password** and **SIP server name** as in the guide below. Navigate to **Voice > VoIP status**, the registration status should be up.

Connect a telephone line from the phone port to your handset and test whether you can make a call or not.



For more information on configuring the VoIP Service on your router, see the **Generic VoIP Setup Guide** at:

<http://support.netcommwireless.com/sites/default/files/NF18ACV-Generic-VoIP-Setup-Guide.pdf>

- 5 Once you can make a call, connect telephone line from the phone port to your printer/fax.

- 6 Navigate to **Voice > SIP Advanced Setting**,
- select **Fax Negotiate** mode to **Negotiate**,
 - tick **Enable T38 support**, and
 - tick **Enable T38 redundancy support**.

Device Info

Basic Setup

Advanced Setup

Wireless

Voice

VoIP Status

SIP Basic Setting

SIP Advanced Setting

SIP Extra Setting

SIP Star Code Setting

SIP Debug Setting

Diagnostics

Management

Logout

Voice -- SIP Advanced Setting

Line	1	2
Call waiting	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Unconditionally Call forwarding number	<input type="text"/>	<input type="text"/>
Busy Call forwarding number	<input type="text"/>	<input type="text"/>
No Answer Call forwarding number	<input type="text"/>	<input type="text"/>
Options Time	<input type="text" value="0"/>	<input type="text" value="0"/>
Forward unconditionally	<input type="checkbox"/>	<input type="checkbox"/>
Forward on "busy"	<input type="checkbox"/>	<input type="checkbox"/>
Forward on "no answer"	<input type="checkbox"/>	<input type="checkbox"/>
MWI	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Anonymous call blocking	<input type="checkbox"/>	<input type="checkbox"/>
Anonymous calling	<input type="checkbox"/>	<input type="checkbox"/>
Anonymous calling mode	<input type="text" value="voipadvAnDisAnony"/>	<input type="text" value="voipadvAnDisAnony"/>
DND	<input type="checkbox"/>	<input type="checkbox"/>
Enable Call Return	<input type="checkbox"/>	<input type="checkbox"/>
Call Transfer	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Call conference	<input type="checkbox"/>	<input type="checkbox"/>
Warm Line	<input type="checkbox"/>	<input type="checkbox"/>
Warm Line URI	<input type="text"/>	<input type="text"/>
Warm Line Delay Timer	<input type="text" value="10"/>	<input type="text" value="10"/>

==Fax Setting==

Fax Negotiate Mode:

Enable T38 support

Enable vbd support

Enable T38 redundancy support

Enable vbd redundancy support

==Settings==

Enable VAD support VAD mode in signal:



Note – The SIP service provider should also support fax.

Contact your internet service provider to confirm if they support FAX service and collect the FAX settings.